

Manual for Using Sample Program Functions Standby Functions (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2)

This manual explains the sample program functions of the standby function for the V850E/IA4 microcontroller.

The explanations are based on usage with the V850E/IA4 microcontroller. Refer to this manual when using the V850E/IA3, V850ES/IK1, and V850ES/IE2 microcontrollers.

Caution

This sample program is provided for reference purposes only and operations are therefore not subject to guarantee by NEC Electronics Corporation. When using this sample program, customers are kindly advised to sufficiently evaluate this product based on their system before usage.

① VOLTAGE APPLICATION WAVEFORM AT INPUT PIN

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (MAX) and V_{IH} (MIN) due to noise, etc., the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (MAX) and V_{IH} (MIN).

② HANDLING OF UNUSED INPUT PINS

Unconnected CMOS device inputs can be cause of malfunction. If an input pin is unconnected, it is possible that an internal input level may be generated due to noise, etc., causing malfunction. CMOS devices behave differently than Bipolar or NMOS devices. Input levels of CMOS devices must be fixed high or low by using pull-up or pull-down circuitry. Each unused pin should be connected to V_{DD} or GND via a resistor if there is a possibility that it will be an output pin. All handling related to unused pins must be judged separately for each device and according to related specifications governing the device.

③ PRECAUTION AGAINST ESD

A strong electric field, when exposed to a MOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop generation of static electricity as much as possible, and quickly dissipate it when it has occurred. Environmental control must be adequate. When it is dry, a humidifier should be used. It is recommended to avoid using insulators that easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors should be grounded. The operator should be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions need to be taken for PW boards with mounted semiconductor devices.

④ STATUS BEFORE INITIALIZATION

Power-on does not necessarily define the initial status of a MOS device. Immediately after the power source is turned ON, devices with reset functions have not yet been initialized. Hence, power-on does not guarantee output pin levels, I/O settings or contents of registers. A device is not initialized until the reset signal is received. A reset operation must be executed immediately after power-on for devices with reset functions.

⑤ POWER ON/OFF SEQUENCE

In the case of a device that uses different power supplies for the internal operation and external interface, as a rule, switch on the external power supply after switching on the internal power supply. When switching the power supply off, as a rule, switch off the external power supply and then the internal power supply. Use of the reverse power on/off sequences may result in the application of an overvoltage to the internal elements of the device, causing malfunction and degradation of internal elements due to the passage of an abnormal current.

The correct power on/off sequence must be judged separately for each device and according to related specifications governing the device.

⑥ INPUT OF SIGNAL DURING POWER OFF STATE

Do not input signals or an I/O pull-up power supply while the device is not powered. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Input of signals during the power off state must be judged separately for each device and according to related specifications governing the device.

These commodities, technology or software, must be exported in accordance with the export administration regulations of the exporting country.
Diversion contrary to the law of that country is prohibited.

• **The information in this document is current as of July, 2006. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books, etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are available in every country. Please check with an NEC Electronics sales representative for availability and additional information.**

- No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.
- NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.
- Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.
- While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment and anti-failure features.
- NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific".

The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

(Note)

- (1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.
- (2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

INTRODUCTION

- Cautions**
1. Download the program used in this manual from the NEC Electronics Website (<http://www.necel.com/>).
 2. When using this sample program, reference the following startup file and link directive file and adjust them if as necessary.
 - Startup file: IA4_start.s
 - Link directive file: IA4_link.dir
 3. In this sample program, control after releasing each standby mode varies depending on whether interrupt is enabled or disabled.
After the HALT mode and IDLE mode are released and an interrupt is enabled, the control branches to the handler, and after the STOP mode is released and interrupt is disabled, the next instruction is executed.

Conventions The function lists are structured as follows.

Hardware name (symbol)

[Function]	Function description
[Function name]	Name of sample function
[Argument]	Type and overview of argument
[Processing content]	Processing content of sample function
[Starting method]	Conditions for calling a function
[SFR(s) used]	Register name and setting content
[call function(s)]	Name and function of call function(s)
[Variable(s)]	Type, name, and overview of variable(s) used in sample function
[Interrupt(s)]	Name of function
[Interrupt source(s)]	Name
[File name]	Name of corresponding sample program file
[Caution(s)]	Caution(s) upon function usage

Interrupt function

[Function name]	Name of interrupt function
[Processing content]	Processing content of interrupt function
[SFR(s) used]	Register name and setting content
[call function(s)]	None
[Variable(s)]	Name of variable, function
[File name]	Name of corresponding sample program file
[Caution(s)]	None

Product Differences

The differences between the V850E/IA4 and the V850E/IA3, V850ES/IK1, and V850ES/IE2 related to the standby functions are shown below.

Item	V850E/IA4	V850E/IA3	V850ES/IK1	V850ES/IE2
Conditions for releasing HALT mode	<ul style="list-style-type: none"> Non-maskable interrupt request signal (INTWDT) Unmasked maskable interrupt request signal Reset signal ($\overline{\text{RESET}}$ pin input, WDTRES signal generation) 	<ul style="list-style-type: none"> Non-maskable interrupt request signal (INTWDT) Unmasked maskable interrupt request signal Reset signal ($\overline{\text{RESET}}$ pin input, WDTRES signal generation) 	<ul style="list-style-type: none"> Non-maskable interrupt request signal (INTWDT) Unmasked maskable interrupt request signal Reset signal ($\overline{\text{RESET}}$ pin input, WDTRES signal generation, LVIRES signal generation, POCRES signal generation) 	
Conditions for releasing IDLE mode	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0 to INTP5, INTP7 pin input) Unmasked internal interrupt request signal from peripheral functions operable in IDLE mode (interrupt request signal related to CSIB in slave mode). $\overline{\text{RESET}}$ pin input 	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0, INTP2 to INTP5, INTP7 pin input) Unmasked internal interrupt request signal from peripheral functions operable in IDLE mode (interrupt request signal related to CSIB in slave mode). $\overline{\text{RESET}}$ pin input 	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0 to INTP5 pin input) Unmasked internal interrupt request signal (INTLVI) Unmasked internal interrupt request signal from peripheral functions operable in IDLE mode (interrupt request signal related to CSIB in slave mode). Reset signal ($\overline{\text{RESET}}$ pin input, LVIRES signal generation, POCRES signal generation) 	
Conditions for releasing STOP mode	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0 to INTP5, INTP7 pin input) Unmasked internal interrupt request signal from peripheral functions operable in STOP mode (interrupt request signal related to CSIB in slave mode). $\overline{\text{RESET}}$ pin input 	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0, INTP2 to INTP5, INTP7 pin input) Unmasked internal interrupt request signal from peripheral functions operable in STOP mode (interrupt request signal related to CSIB in slave mode). $\overline{\text{RESET}}$ pin input 	<ul style="list-style-type: none"> Unmasked external interrupt request signal (INTP0 to INTP5 pin input) Unmasked internal interrupt request signal (INTLVI) Unmasked internal interrupt request signal from peripheral functions operable in STOP mode (interrupt request signal related to CSIB in slave mode). Reset signal ($\overline{\text{RESET}}$ pin input, LVIRES signal generation, POCRES signal generation) 	

Related Documents The related documents indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

Documents related to V850E/IA3, V850E/IA4, V850ES/IK1, and V850ES/IE2

Document Name	Document No.
V850E1 Architecture User's Manual	U14559E
V850E/IA3, V850E/IA4 Hardware User's Manual	U16543E
V850ES Architecture User's Manual	U15943E
V850ES/IK1 Hardware User's Manual	U16910E
V850ES/IE2 Hardware User's Manual	U17716E
Inverter Control by V850 Series Vector Control by Hole Sensor Application Note	U17338E
Inverter Control by V850 Series Vector Control by Encoder Application Note	U17324E
Inverter Control by V850 Series 120° Excitation Method Control by Zero-Cross Detection Application Note	U17209E
Manual for Using Sample Program Functions Serial Communication (UARTA) (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18233E
Manual for Using Sample Program Functions Serial Communication (CSIB) (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18234E
Manual for Using Sample Program Functions DMA Functions (V850E/IA3, V850E/IA4) Application Note	U18235E
Manual for Using Sample Program Functions Timer M (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18236E
Manual for Using Sample Program Functions Watchdog Timer (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18237E
Manual for Using Sample Program Functions Timer P (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18238E
Manual for Using Sample Program Functions Timer Q (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18239E
Manual for Using Sample Program Functions Timer ENC (V850E/IA3, V850E/IA4) Application Note	U18240E
Manual for Using Sample Program Functions Port Functions (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18241E
Manual for Using Sample Program Functions Clock Generator (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18242E
Manual for Using Sample Program Functions Standby Functions (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	This manual
Manual for Using Sample Program Functions Interrupt Functions (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18244E
Manual for Using Sample Program Functions A/D Converters 0 and 1 (V850E/IA3, V850E/IA4, V850ES/IK1, V850ES/IE2) Application Note	U18245E
Manual for Using Sample Program Functions A/D Converter 2 (V850E/IA3, V850E/IA4) Application Note	U18246E

CONTENTS

Standby functions

 HALT mode..... 9

Standby functions

 IDLE mode..... 12

Standby functions

 STOP mode..... 18

Standby functions

HALT mode


[Function]	Sets standby function (HALT mode).
[Function name]	halt_main
[Argument]	None
[Processing content]	Sets from normal operation mode to HALT mode. The HALT mode is released by an external interrupt request signal.
[Starting method]	None
[SFR used]	None
[call functions]	halt_init, halt_mode
[Variable]	None
[Interrupt]	external_int
[Interrupt source]	INTP7
[File name]	halt.c
[Caution]	Interrupts not to be used must be masked before setting to HALT mode.

[Function name]	halt_init
[Processing content]	Sets an external interrupt request signal (INTP7) for releasing HALT mode.
[SFRs used]	PMC0: 0x80 (Sets to alternate-function pin.) INTR0: 0x80 (Sets valid edge to rising edge.) INTF0: 0x00 (Sets valid edge to rising edge.) PIC7.PIF7: 0 (Clears INTP7 interrupt request flag.) IMR3: 0xFFFF (Masks interrupt.) IMR2: 0xFFFF (Masks interrupt.) IMR1: 0xFFFF (Masks interrupt.) IMR0: 0xFFFF (Masks interrupt.) PIC7.PMK7: 0 (Enables INTP7 interrupt servicing.)
[call function]	None
[Variable]	None
[File name]	halt.c
[Caution]	None

[Function name]	halt_mode
[Processing content]	Executes HALT instruction.
[SFR used]	None
[call function]	None
[Variable]	None
[File name]	halt.c
[Caution]	Insert five or more NOP instructions after the HALT instruction.

Interrupt function

[Function name]	external_int
[Processing content]	There is no particular processing because this is used for confirmation of external interrupt occurrence.
[SFR used]	None
[call function]	None
[Variable]	None
[File name]	halt.c
[Caution]	None

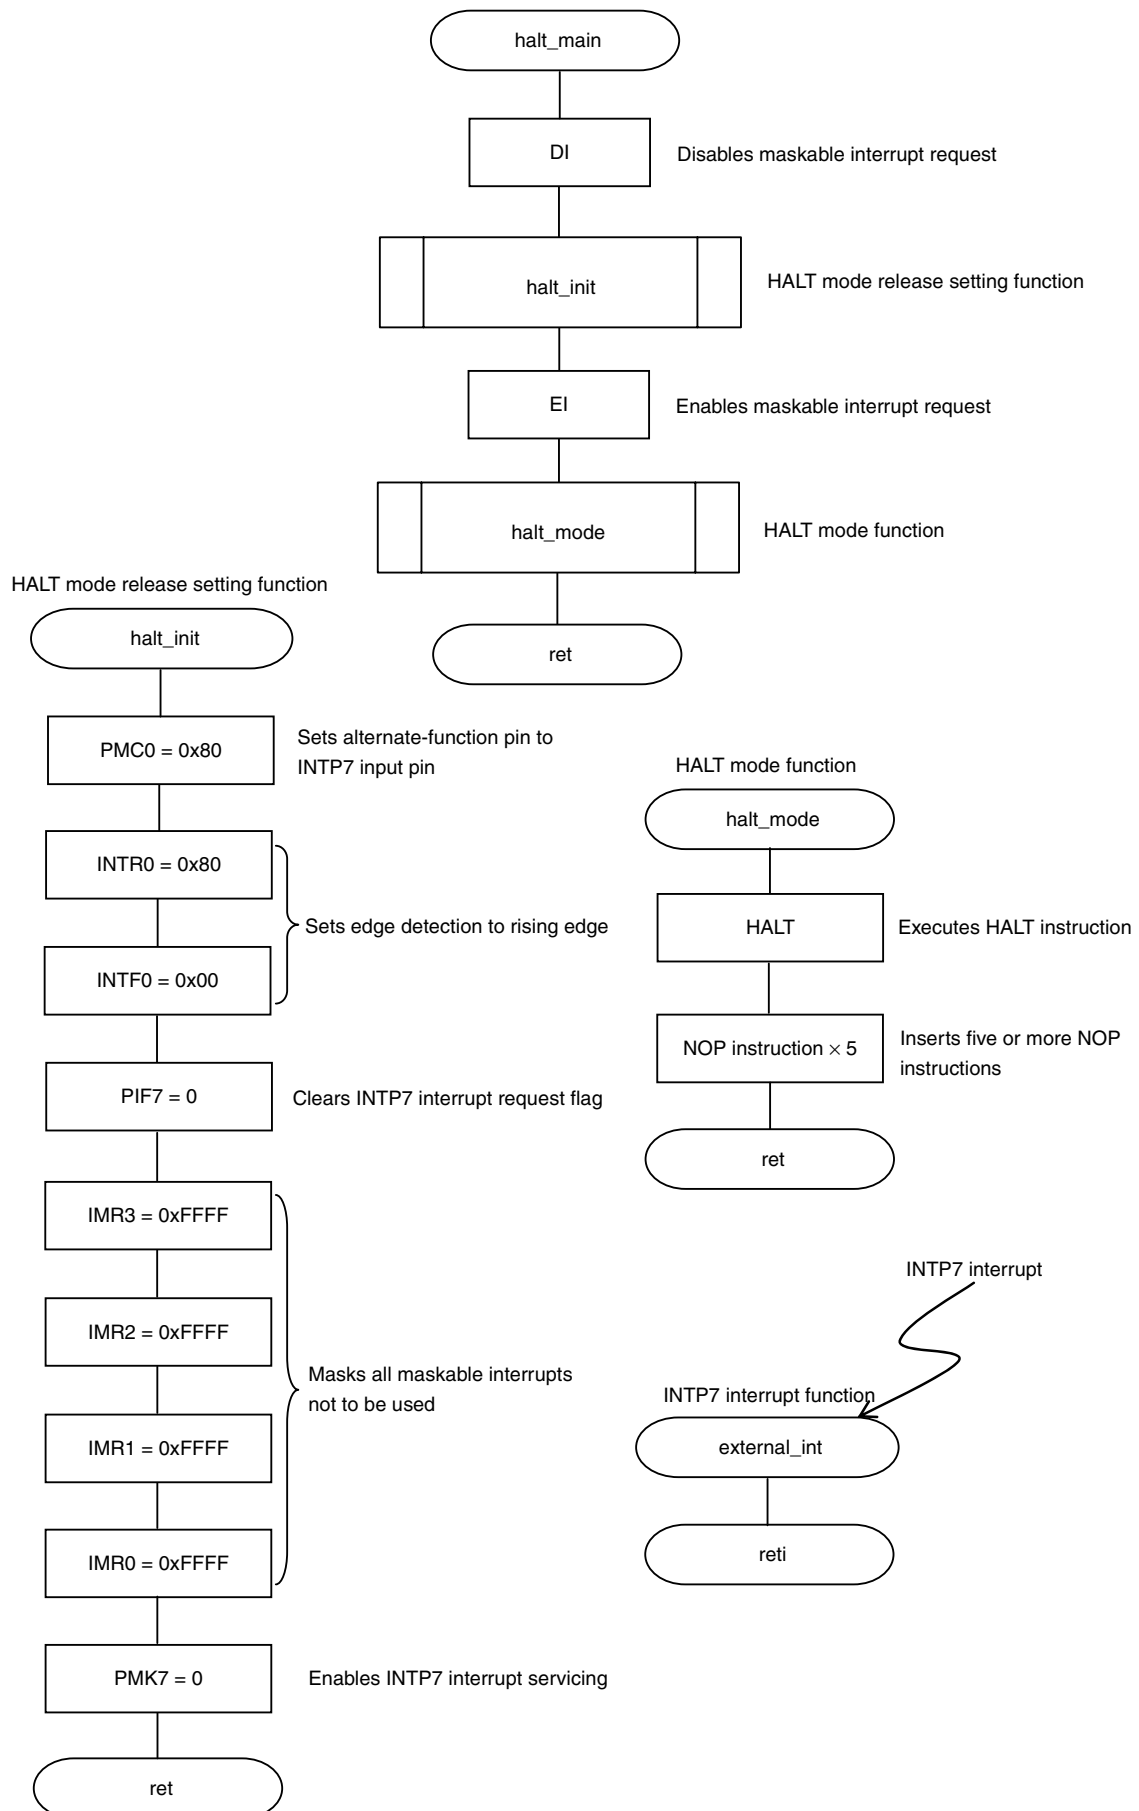

Standby functions

IDLE mode


[Function]	Sets standby function (IDLE mode).
[Function name]	idle_main
[Argument]	None
[Processing content]	Sets from normal operation mode to IDLE mode. The IDLE mode is released by an external interrupt request signal.
[Starting method]	None
[SFR used]	None
[call functions]	idle_init, idle_mode
[Variable]	None
[Interrupt]	external_int
[Interrupt source]	INTP7
[File name]	idle.c
[Caution]	Interrupts not to be used must be masked before setting to IDLE mode.

[Function name]	idle_init
[Processing content]	Sets an external interrupt request signal (INTP7) for releasing IDLE mode.
[SFRs used]	PMC0: 0x80 (Sets to alternate-function pin.) INTR0: 0x80 (Sets valid edge to rising edge.) INTF0: 0x00 (Sets valid edge to rising edge.) PIC7.PIF7: 0 (Clears INTP7 interrupt request flag.) IMR3: 0xFFFF (Masks interrupt.) IMR2: 0xFFFF (Masks interrupt.) IMR1: 0xFFFF (Masks interrupt.) IMR0: 0xFFFF (Masks interrupt.) PIC7.PMK7: 0 (Enables INTP7 interrupt servicing.)
[call function]	None
[Variable]	None
[File name]	idle.c
[Caution]	None



[Function name]	idle_mode
[Processing content]	Executes IDLE mode by forcibly terminating all DMA transfers.
[SFRs used]	DCHC0.TC0 DMA0 transfer status bit DCHC0.E00: 1 (Enables DMA0 transfer.) DCHC0.INIT0: 1 (Forcibly terminates DMA0 transfer.) DCHC1.TC1 DMA1 transfer status bit DCHC1.E11: 1 (Enables DMA1 transfer.) DCHC1.INIT1: 1 (Forcibly terminates DMA1 transfer.) DCHC2.TC2 DMA2 transfer status bit DCHC2.E22: 1 (Enables DMA2 transfer.) DCHC2.INIT2: 1 (Forcibly terminates DMA2 transfer.) DCHC3.TC3 DMA3 transfer status bit DCHC3.E33: 1 (Enables DMA3 transfer.) DCHC3.INIT3: 1 (Forcibly terminates DMA3 transfer.) PRCMD: 0x03 (Writes to command register (used when writing to a special register).) PCC: 0x03 (Selects clock as fxx/8.) PSMR: 0x00 (Sets to IDLE mode.) PRCMD: 0x02 (Writes to command register (used when writing to a special register).) PSC: 0x02 (Enables standby mode release and sets to standby mode.)
[call function]	None
[Variable]	None
[File name]	idle_mode.c
[Cautions]	<ul style="list-style-type: none"> • DMA transfer is forcibly terminated in this sample program, because all DMA transfers must be terminated before performing data setting to the special register. • PCC and PSC registers are special registers and can therefore only be written in combination of specific sequences. • When setting to IDLE mode, set in the order of, the PCC register (set to 03H), the PSMR.PSM0 bit, and the PSC.STB bit.


Interrupt function

[Function name]	external_int
[Processing content]	There is no particular processing because this is used for confirmation of external interrupt occurrence.
[SFR used]	None
[call function]	None
[Variable]	None
[File name]	idle.c
[Caution]	None

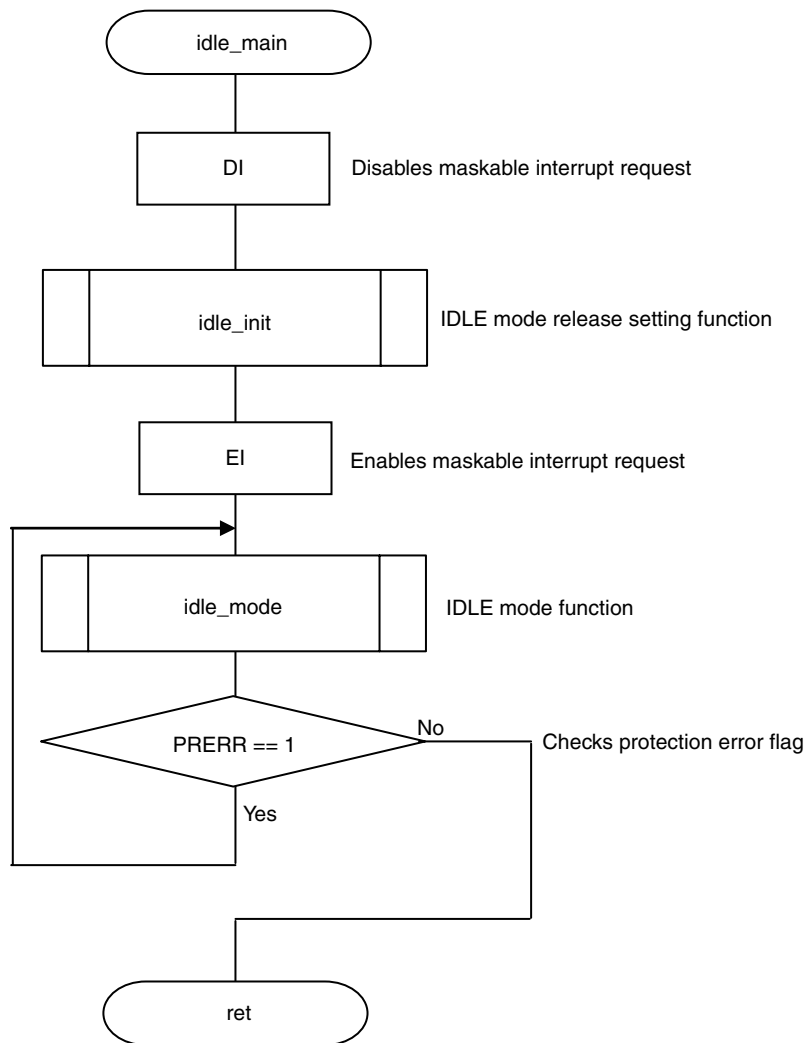

IDLE mode release setting function

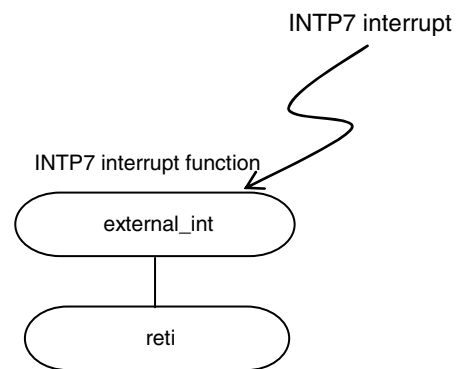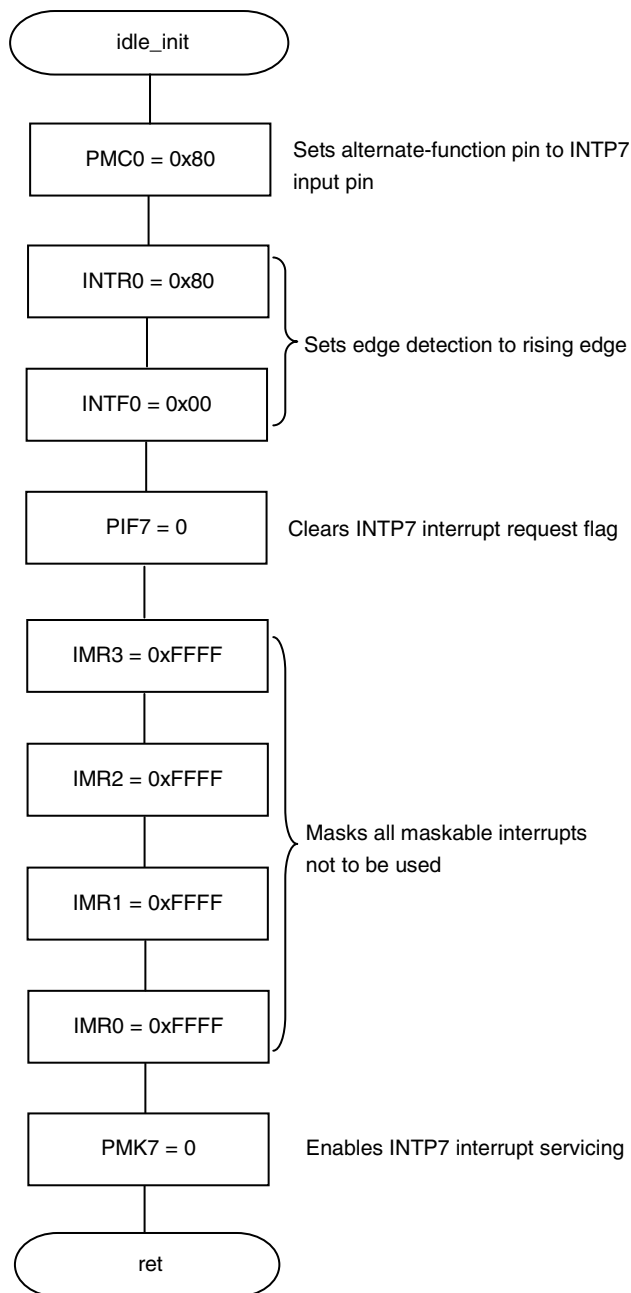

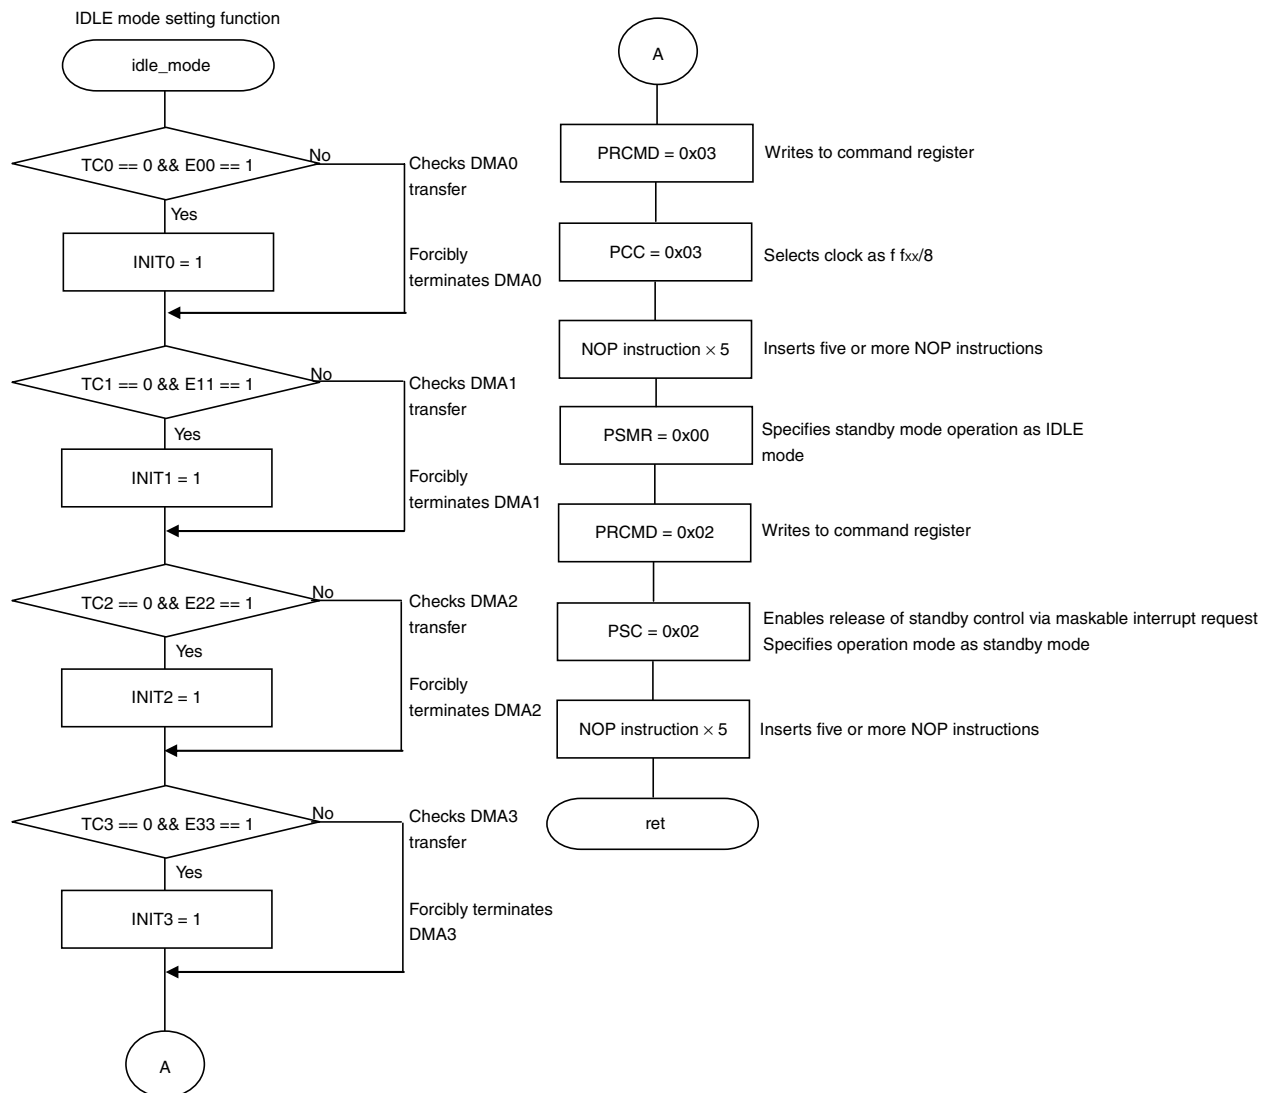


Standby functions


STOP mode


[Function]	Sets standby function (STOP mode).
[Function name]	stop_main
[Argument]	None
[Processing content]	Sets from normal operation mode to STOP mode. The STOP mode is released by an external interrupt request signal.
[Starting method]	None
[SFR used]	None
[call functions]	stop_init, stop_mode
[Variable]	None
[Interrupt]	None
[Interrupt source]	None
[File name]	stop.c
[Cautions]	<ul style="list-style-type: none"> • Interrupts not to be used must be masked before setting to STOP mode. • The INTP7 interrupt request signal is kept set after releasing STOP mode.

[Function name]	stop_init
[Processing content]	Sets an external interrupt request signal (INTP7) for releasing STOP mode.
[SFRs used]	OSTS: 0x07 (Sets oscillation stabilization time to 16.4 ms) PMCO: 0x80 (Sets to alternate-function pin.) INTR0: 0x80 (Sets valid edge to rising edge.) INTF0: 0x00 (Sets valid edge to rising edge.) PIC7.PIF7: 0 (Clears INTP7 interrupt request flag.) IMR3: 0xFFFF (Masks interrupt.) IMR2: 0xFFFF (Masks interrupt.) IMR1: 0xFFFF (Masks interrupt.) IMR0: 0xFFFF (Masks interrupt.) PIC7.PMK7: 0 (Enables INTP7 interrupt servicing.)
[call function]	None
[Variable]	None
[File name]	stop.c
[Caution]	None

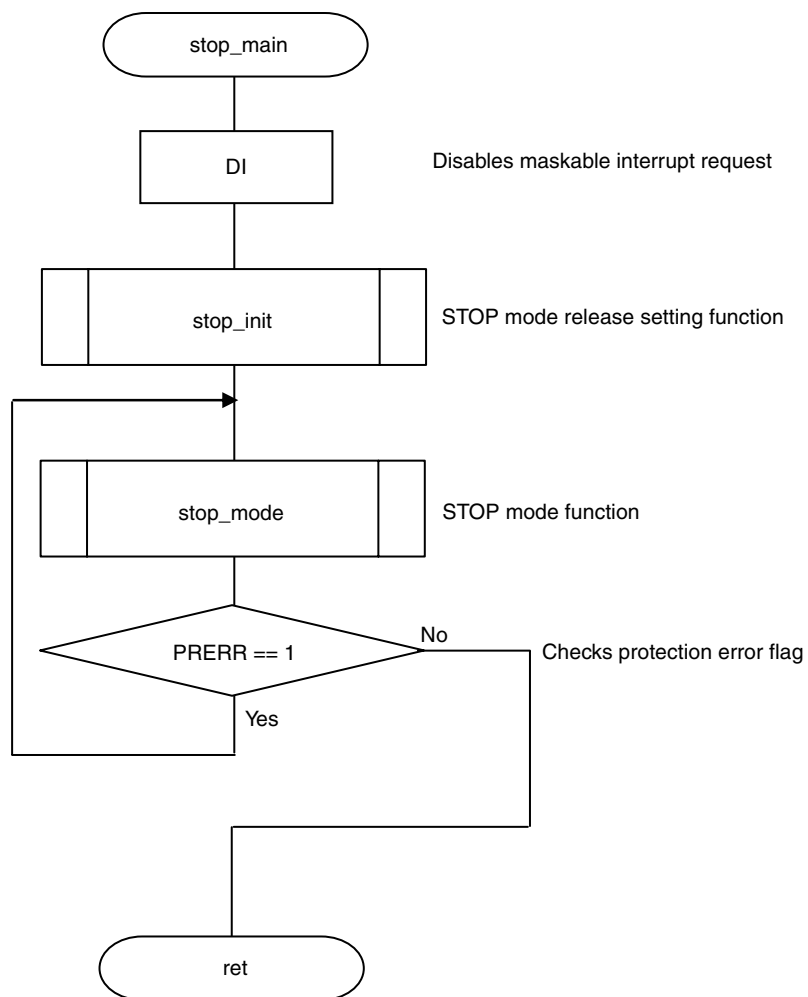

STOP mode release setting function

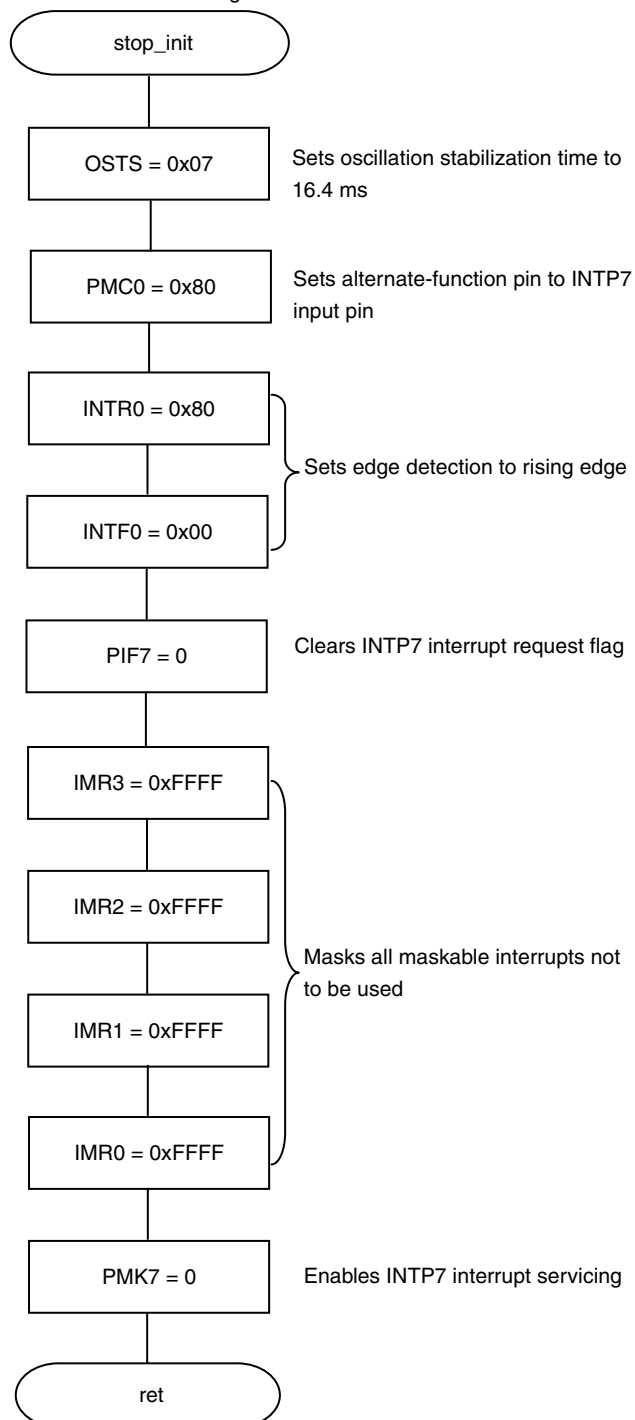

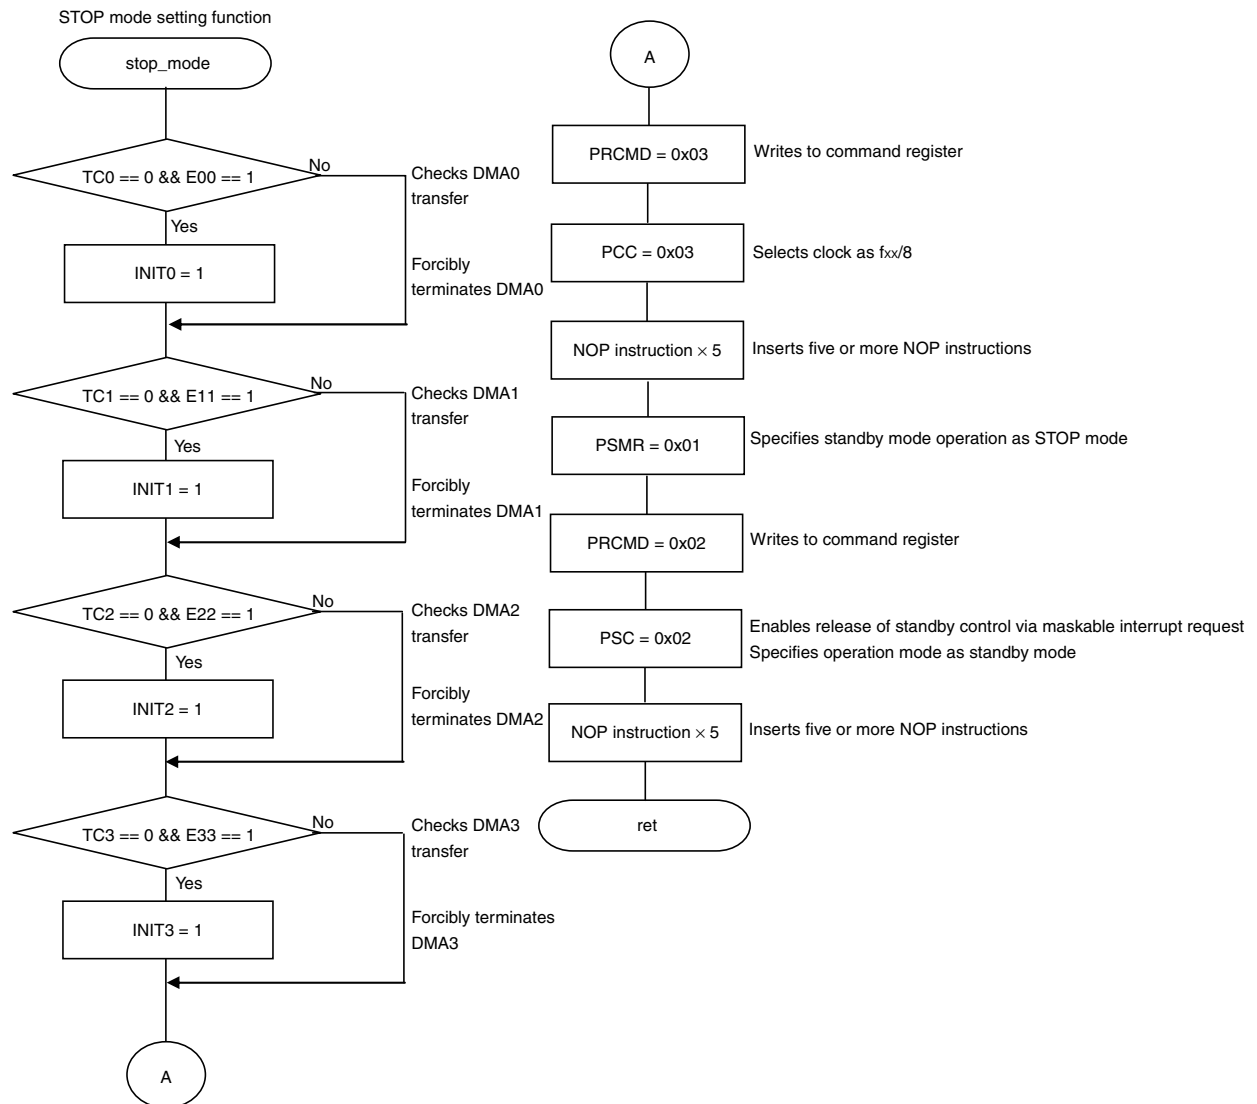

*For further information,
please contact:*

NEC Electronics Corporation

1753, Shimonumabe, Nakahara-ku,
Kawasaki, Kanagawa 211-8668,
Japan
Tel: 044-435-5111
<http://www.necel.com/>

[America]

NEC Electronics America, Inc.

2880 Scott Blvd.
Santa Clara, CA 95050-2554, U.S.A.
Tel: 408-588-6000
800-366-9782
<http://www.am.necel.com/>

[Europe]

NEC Electronics (Europe) GmbH

Arcadiastrasse 10
40472 Düsseldorf, Germany
Tel: 0211-65030
<http://www.eu.necel.com/>

Hanover Office

Podbielskistrasse 166 B
30177 Hannover
Tel: 0 511 33 40 2-0

Munich Office

Werner-Eckert-Strasse 9
81829 München
Tel: 0 89 92 10 03-0

Stuttgart Office

Industriestrasse 3
70565 Stuttgart
Tel: 0 711 99 01 0-0

United Kingdom Branch

Cygnus House, Sunrise Parkway
Linford Wood, Milton Keynes
MK14 6NP, U.K.
Tel: 01908-691-133

Succursale Française

9, rue Paul Dautier, B.P. 52
78142 Velizy-Villacoublay Cédex
France
Tel: 01-3067-5800

Sucursal en España

Juan Esplandiú, 15
28007 Madrid, Spain
Tel: 091-504-2787

Tyskland Filial

Täby Centrum
Entrance S (7th floor)
18322 Täby, Sweden
Tel: 08 638 72 00

Filiale Italiana

Via Fabio Filzi, 25/A
20124 Milano, Italy
Tel: 02-667541

Branch The Netherlands

Steijgerweg 6
5616 HS Eindhoven
The Netherlands
Tel: 040 265 40 10

[Asia & Oceania]

NEC Electronics (China) Co., Ltd

7th Floor, Quantum Plaza, No. 27 ZhiChunLu Haidian
District, Beijing 100083, P.R.China
Tel: 010-8235-1155
<http://www.cn.necel.com/>

NEC Electronics Shanghai Ltd.

Room 2511-2512, Bank of China Tower,
200 Yincheng Road Central,
Pudong New Area, Shanghai P.R. China P.C.:200120
Tel: 021-5888-5400
<http://www.cn.necel.com/>

NEC Electronics Hong Kong Ltd.

12/F., Cityplaza 4,
12 Taikoo Wan Road, Hong Kong
Tel: 2886-9318
<http://www.hk.necel.com/>

NEC Electronics Taiwan Ltd.

7F, No. 363 Fu Shing North Road
Taipei, Taiwan, R. O. C.
Tel: 02-8175-9600
<http://www.tw.necel.com/>

NEC Electronics Singapore Pte. Ltd.

238A Thomson Road,
#12-08 Novena Square,
Singapore 307684
Tel: 6253-8311
<http://www.sg.necel.com/>

NEC Electronics Korea Ltd.

11F., Samik Lavied'or Bldg., 720-2,
Yeoksam-Dong, Kangnam-Ku,
Seoul, 135-080, Korea
Tel: 02-558-3737
<http://www.kr.necel.com/>

G06.11A